


Foresters British Made Solid Oak Toilet Seats

The Bristol Throne Toilet Seat Fitting Instructions

Fixing holes are not pre-drilled; this is because fixing holes are not the same on all toilet pans. It will be necessary for the person fitting this seat to drill two holes in the back piece for the fixing bolts. The position of the holes can be determined by placing the seat on the pan in its correct position. Using a pencil in the fixing hole; mark the position of the wood to be drilled. It is recommended to drill a 3mm pilot hole first and then double check the seat has been marked in the correct place before drilling an 8mm hole.

Fit your seat as in the diagram below.

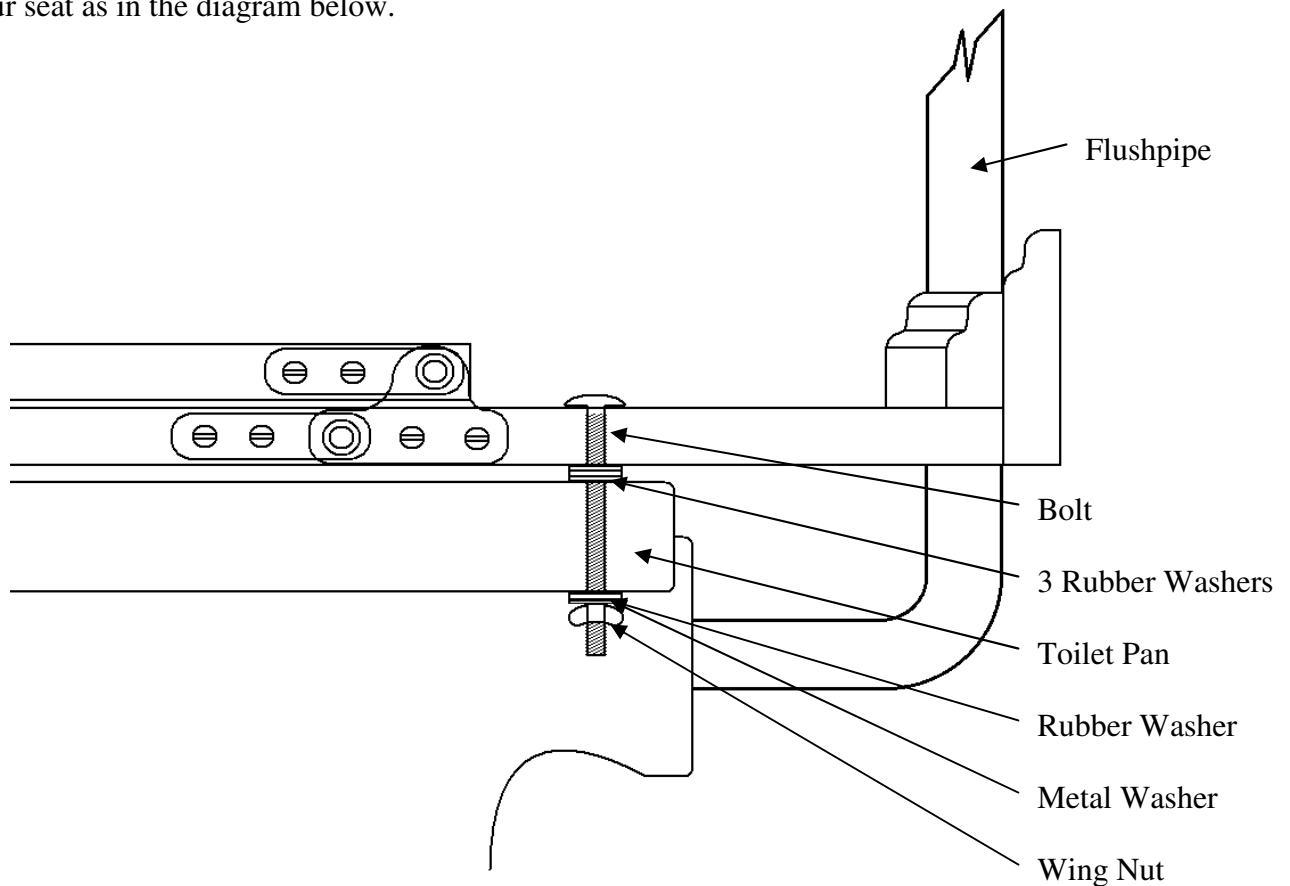

Cleaning Advice

To clean the surface of this seat and hinges use a sift cloth and mild washing up liquid solution. Do not use cleaners containing bleach; do not scrub or scour the wooden surface or use abrasive cleaning materials.

WARNING

DO NOT STAND ON THIS SEAT; EVEN WITH THE LID DOWN, AS THIS WILL CAUSE DAMAGE AND/OR BREAKAGE.